

SNOW

SnowPAR™ Pro Tri 18 DMX-chart

DMX 1 Channel mode

CH1	Black	0~17
	Red	18~35
	Green	36~53
	Blue	54~71
	Amber	72~89
	Orange	90~107
	Yellow	108~125
	Purple	126~143
	Pink	144~161
	Cyan	162~179
	light red	180~197
	light green	198~215
	light blue	216~233
	Warm white	234~251
	Cold white	252~255

DMX 3 Channel mode

CH1	Red	0~255
CH2	Green	0~255
CH3	Blue	0~255

DMX 4 Channel mode

CH1	Dimmer	0~255
CH2	Red	0~255
CH3	Green	0~255
CH4	Blue	0~255

DMX 6 Channel mode

CH1	Dimmer	0~255		
CH2	R	0~255	Ch. 6: 0	= Ch. 2 Red dimming
			Ch. 6: 1~27	= Ch. 2 Color select (Ch1 list)
			Ch. 6: 28~251	= Ch. 2 speed control
CH3	G	0~255	Ch. 6: 0	= Ch. 3 Green dimming
CH4	B	0~255	Ch. 6: 0	= Ch. 4 Blue dimming
CH5	Strobe	0~255		
CH6	Program	0~ R/G/B Dimming		
	Pr.01	1~27		
	Pr.02	28~55		
	Pr.03	56~83		
	Pr.04	84~111		
	Pr.05	112~139		
	Pr.06	140~167		
	Pr.07	168~195		
	Pr.08	196~223		
	Pr.09	224~251		
	Sound	252~255		