

SNOW

SnowPAR™ Pro Quad 10 DMX-chart

DMX 4 Channel mode

CH1	Red	0~255
CH2	Green	0~255
CH3	Blue	0~255
CH4	White	0~255

DMX 6 Channel mode

CH1	Dimmer	0~255
CH2	Red	0~255
CH3	Green	0~255
CH4	Blue	0~255
CH5	White	0~255
CH6	Strobe	0~255

DMX 8 Channel mode

CH1	Dimmer	0~255	
CH2	Red	0~255	Ch. 6: 0 = Ch. 2 Red dimming
CH3	Green	0~255	Ch. 6: 0 = Ch. 3 Green dimming
CH4	Blue	0~255	Ch. 6: 0 = Ch. 4 Blue dimming
CH5	White	0~255	Ch. 6: 0 = Ch.5 White dimming
CH6	Program	0~R/G/B/W Dimming	Ch.7: No use
	Pr.01	1~24	Ch.7: Color select -----> 0~9 Blackout
	Pr.02	25~49	Ch.7: Speed 0~255 10~26 Red
	Pr.03	50~74	Ch.7: Speed 0~255 27~43 Yellow
	Pr.04	75~99	Ch.7: Speed 0~255 44~60 Orange
	Pr.05	100~124	Ch.7: Speed 0~255 61~77 Green
	Pr.06	125~149	Ch.7: Speed 0~255 78~94 Cyan
	Pr.07	150~174	Ch.7: Speed 0~255 95~111 Blue
	Pr.08	175~199	Ch.7: Speed 0~255 112~128 Purple
	Pr.09	200~224	Ch.7: Speed 0~255 129~145 Rose
	Pr.10	225~249	Ch.7: Speed 0~255 146~162 White
Sound	250~255	163~179 Light red	
CH7	Speed/static color	0~ R/G/B Dimming	180~196 Light green
CH8	Strobe	0~255	197~213 Light blue
			214~230 Cold White
			231~247 Warm white
			248~255 All