

DMX-chart for SnowBLIND™ 2

1CH	Function	Value	Percent/Setting
1	White 1-2	000-255	0~100%

2CH	Function	Value	Percent/Setting
1	White1	000-255	0~100%
2	White2	000-255	0~100%

4CH	Function	Value	Percent/Setting
1	Dimmer	000-255	0~100%
2	White1	000-255	0~100%
3	White2	000-255	0~100%
4	Strobe	000-010 011-255	NO Function Strobe Slow to Fast

7CH	Function	Value	Percent/Setting
1	Dimmer	000-255	0~100%
2	White1	000-255	0~100%
3	White2	000-255	0~100%
4	Strobe	000-010 011-255	NO Function Strobe Slow to Fast
5	Auto Programs	000-010 011-040 041-080 081-120 121-170 171-220 221-255	No function Auto program 1 Auto program 2 Auto program 3 Auto program 4 Auto program 5 Auto program 6
6	Auto Speed	000-255	Speed Slow to Fast
7	Dimmer Speed Mode	000-051 052-101 102-152 153-203 204-255	Preset dimmer speed from display menu Dimmer speed mode off Dimmer speed mode1 (fast speed) Dimmer speed mode2 (middle speed) Dimmer speed mode3 (slow speed)